



Ethanol Gel Stove INSTRUCTIONS

HLOMELANG MARKETING

PO Box 65953,
Reservoir Hills, 4090
www.hlomelang.co.za



How to Use



Place stove on flat surface and remove regulator lid



Remove pot support



Pour gel into gel container through large opening



Replace pot support



Dip the screw end of the regulator lid into the gel container



Light the tip end of the screw



Use the lit gel to ignite gel in container



Place pot on stove



Set dial position to 1, 2 or 3 for desired heat intensity



Cook food




Set heat dial to 0 and replace regulator lid to extinguish flame



Wash and clean stove after use

DO NOT POUR COOKING GEL ONTO FIRE

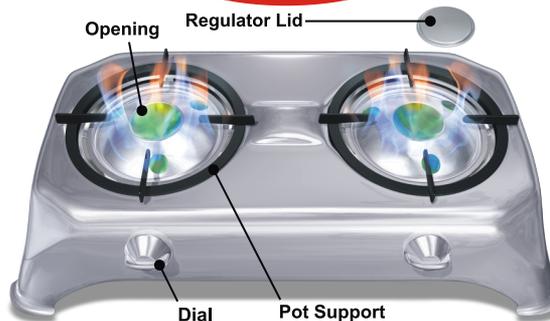

Instructions and Warnings

- Before lighting the appliance, ensure that all the components are undamaged and properly assembled in accordance with the illustrated design.
- Do not place the appliance near flammable items.
- Place the appliance on a reasonably level and stable surface. The level can be checked by placing a pan of water on the surface.
- Use only ethanol gel as a fuel.
- Do not use paraffin, petrol, methylated spirit or water in the appliance.
- Store ethanol gel out of reach of children in a safe container, marked 'Ethanol Gel'.
- Use the appliance in a well ventilated area.
- Do not fill the appliance when lit.
- Do not carry or move a cooking appliance when lit.
- Do not leave a lit appliance unattended.
- Be extremely careful if it is necessary to move the lit appliance.
- Do not use the stove as a heater.
- Do not leave children alone when the appliance is lit.
- Make sure the heat adjuster is in the closed position and the fire is out when you have finished cooking.
- Wash the stove regularly with water and dishwashing liquid.
- Keep stove and cooking gel out of reach of children.