



# Ethanol Gel Stove INSTRUCTIONS

**HLOMELANG MARKETING**

PO Box 65953,  
Reservoir Hills, 4090  
www.hlomelang.co.za



## How to Use



1. Place stove on a flat surface.



2. Remove pot support and regulator lid.



3. Pour gel into the gel container.



4. Replace pot support.



5. Dip an end of a fork into some gel.

6. Light the gel and hover the lit gel above the gel container.



7. Set dial position to 1, 2 or 3 for the required heat intensity.



8. To extinguish flame set the heat adjuster dial to 0 and replace regulator lid. Wash and clean stove after use.



**DO NOT POUR  
COOKING GEL  
ONTO FIRE**

## Instructions and Warnings

- Before lighting the appliance, ensure that all the components are undamaged and properly assembled in accordance with the illustrated design.
- Do not place the appliance near flammable items.
- Place the appliance on a reasonably level and stable surface. The level can be checked by placing a pan of water on the surface.
- Use only ethanol gel as a fuel.
- Do not use paraffin, petrol, methylated spirit or water in the appliance.
- Store ethanol gel out of reach of children in a safe container, marked 'Ethanol Gel'.
- Use the appliance in a well ventilated area.
- Do not fill the appliance when lit.
- Do not carry or move a cooking appliance when lit.
- Do not leave a lit appliance unattended.
- Be extremely careful if it is necessary to move the lit appliance.
- Do not use the stove as a heater.
- Do not leave children alone when the appliance is lit.
- Make sure the heat adjuster is in the closed position and the fire is out when you have finished cooking.
- Wash the stove regularly with water and dishwashing liquid.
- Keep stove and cooking gel out of reach of children.